



# Mailbox Post Info Sheet

1

## 2 COMMON STYLES AVAILABLE IMMEDIATELY:

A) 7" x 7" x 7'-0"

Thermal 2 sides, split face 2 sides  
with bracket installed on post

**Woodbury Gray**

B) 7" x 7" x 7'-0"

Thermal 2 sides, rock face 2 sides

**Woodbury Gray**  
**Caledonia**

\* Standard single-scroll black wrought iron bracket. Posts weigh approximately 400 pounds each.

## OTHER STYLES AND SIZES AVAILABLE PER REQUEST

### OPTIONS AVAILABLE:

1. Lettering
2. Black aluminum mailbox bracket
3. Double-scroll wrought iron mailbox bracket
4. Azek mailbox bracket
5. Azek mailbox and newspaper bracket
6. Double mailbox bracket (fit 2 boxes side-by-side)
7. Mail and newspaper box bracket, single-scroll
8. Mail and newspaper box bracket, double-scroll
9. Black newspaper tube (to be used on newspaper brackets above)
10. Mailbox kit
11. Black aluminum newspaper box
12. "L" shaped mailbox plate bracket (mounts to side of post)
13. Azek mailbox post cap
14. Delivery: quoted separately

Typical U.S. Postal regulations require the height from the street level to the bottom of the mailbox to be 40" to 44", but please check with your local postmaster for their requirements. A stock-size post would need a hole 30" deep, and 18" diameter. Varying USPS height requirements, as well as any engraving or non-stock accessories added to post may require a longer non-stock post, so that proper mailbox height can be maintained. Before starting any digging projects, state law requires that you contact Dig Safe, by dialing 811.

Any height measurement needs to be from street level, not curb or grade level.

**FOR 141 YEARS, SWENSON STONE WORKS HAS BEEN, AND WILL ALWAYS BE  
IN THE FUTURE, A SUPPLIER OF A 100% NATURAL PRODUCT.**



# Mailbox Post Info Sheet


2

- Bottom of mailbox needs to finish at 40" to 44" above street level. \*
- Hole needs to be 30" deep (up and down) and 18" diameter (across hole). \*\*
  - By law, you must always contact Dig Safe before digging, so they can mark any underground utilities before you dig, by dialing 811.
- You must add height of curb to depth of hole, as shown, if there is curbing at street, i.e., height of curb is 6", hole needs to be 36" deep.
- We will install your post (for an additional fee) into a pre-dug hole of proper dimension.
  - Driver will not dig hole.
  - Site must be prepared before delivery.
  - Please leave loose fill by hole, for driver to backfill.
  - Driver will install post plumb, and compact hole to grade with available fill.


\* Always check with your local post office, to confirm their requirements for height of box, as well as distance from street that post needs to be installed. Each individual postal office may have varying regulations.

\*\* Special engraving, hardware, brackets, etc...may require a longer non-stock post to allow enough of the post to be buried in ground for stability. This may also affect hole depth.

## Mailbox Post Installation

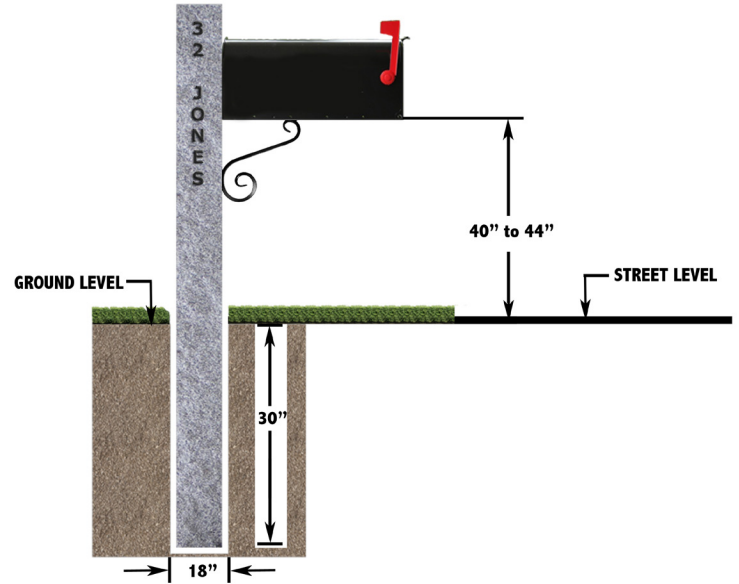

## Mailbox Post Installation with Curbing at Street

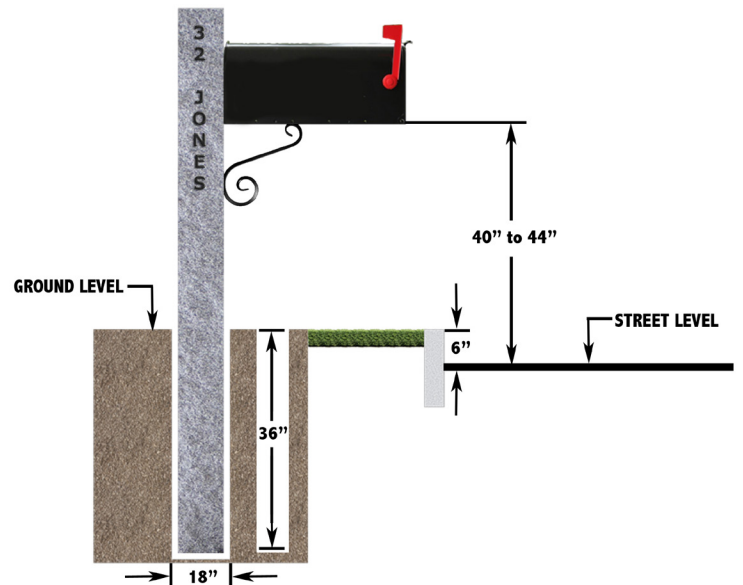

FOR 141 YEARS, SWENSON STONE WORKS HAS BEEN, AND WILL ALWAYS BE  
IN THE FUTURE, A SUPPLIER OF A 100% NATURAL PRODUCT.